



## 1 Programming the emitter

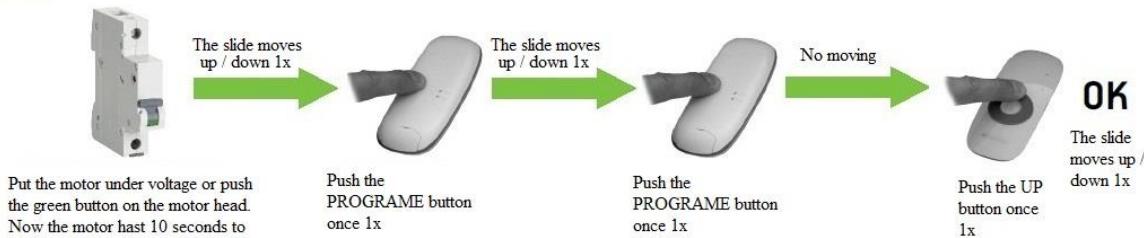


## 2 Change direction

Push the green button on the motor head and hold it for 6 seconds till the slide moves up / down 1x. Now we changed direction!


## 3 Copy the emitter (Don't need power cut off, this is the only way to learn more emitter to a motor)

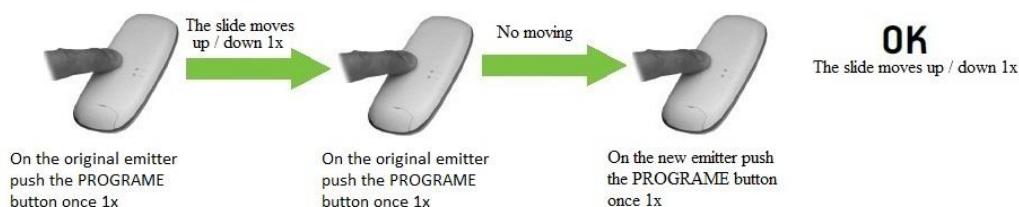

## 4 Erase the emitter (Don't need power cut off)

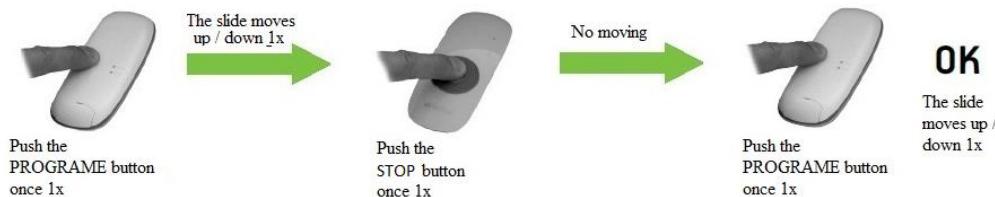

## 5 Step mode function on / off (Don't need power cut off)

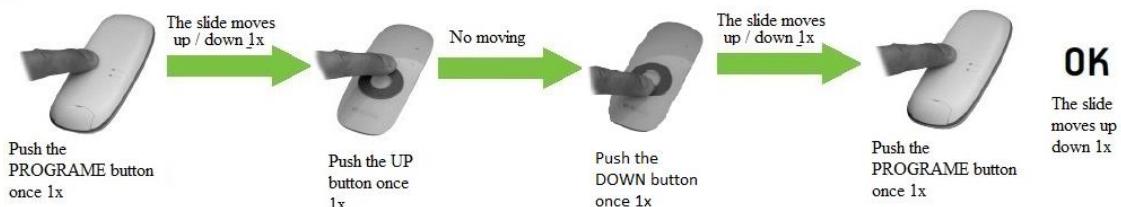

### iroda:

H-1139 Budapest, Frangepán utca 79.

[www.smart-home.hu](http://www.smart-home.hu) | [info@smart-home.hu](mailto:info@smart-home.hu) | +36 20 287 1714

### számlázási cím:

SANET-Trade Kft. | H-1139 Budapest, Petneházy utca 28.

Adószám: 14996429-2-41 | Bankszámlaszám: 10401000-50515755-88901018 K&H