



1 Learning the emitter (During the programing only that 1 piece of motor can be under voltage.)

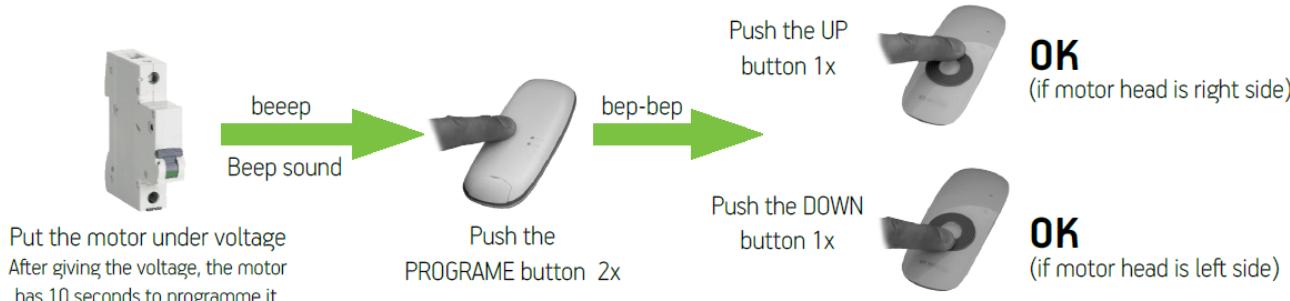

2 Change direction

If the motor has wrong direction after the programme, cut down the power for 3 seconds and learn the emitter again with the opposite direction button.

3 Copy the emitter (Don't need power cut off, this is the only way to learn more emitter to a motor.)

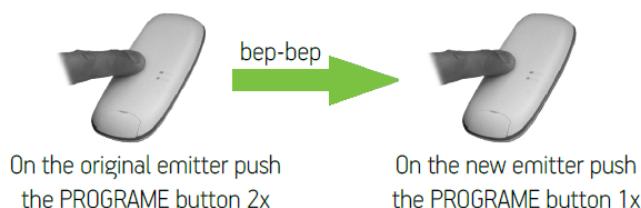

4 Erase the emitter (With this erase all of the emitters will be erased from the motor.)



iroda:

H-1139 Budapest, Frangepán utca 79.

www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

számlázási cím:

SANET-Trade Kft. | H-1139 Budapest, Petneházy utca 28.

Adószám: 14996429-2-41 | Bankszámlaszám: 10401000-50515755-88901018 K&H