

# MANUAL for KEYAD

## TECHNICAL FEATURES

Model KWPAD2

3\*BATT+AAA 1.5V

FREQ 433,92MHZ AM

2 Channels

STANDARD CHIP

SOFTWARE PATENTED



## 1. New Password Setup

The default password is **8888** at the factory.

### -Changing password:

Sequentially press key **PIN+CCCC** (CCCC=current password). Right after press **PIN+NNNN** (NNNN=new password) and repeat **PIN+NNNN** again to confirm new passwords. If password has been changed successfully, keypad will play a long beep.

**Example:** change default password **8888** as new one, **1234**  
**PIN+8888 + PIN+1234 + PIN+1234**

### -Reset password:

Open the keypad cover for remove batteries. After that press button **8** and keep holding, insert the batteries again. Keypad beeps for 1s. Passwords have been reset to default passwords, the **8888**

## 2. Programming Instructions.

- The keypad must be programmer into the receiver before it can work.
- Open receiver memory. Please refer to your receiver's user manual.
- Sequentially press key **OK + CCCC+PIN** (CCCC=current password) to program channel 1. For example, **OK + 1234+PIN**, the receiver will indicate if program successfully.
- Press key **OK + CCCC+OK** for channel 2 programming.

## 3. Handing instructions

Keypad works as 2 channels remote by buttons **PIN** or **OK**.

- Channel 1: **CCCC+PIN** (CCCC=password) Example: **1234+PIN**, channel 1 works
- Channel 2: **CCCC+OK** (CCCC=password) Example: **1234+OK**, channel 2 works