

User Manual DC1805

1. Setting the exact time:

Press the **MODE** button on the back of the remote control and set the display to the man (manual) position.

Press and hold the **TIME** button continuously (for approximately 5 seconds) until the hour starts flashing on the display.

Now, use the **UP/DOWN** buttons on the front of the remote control to set the correct hour, then press the **right-facing** button briefly once.

Now, use the **UP/DOWN** buttons on the front of the remote control to set the correct minute.

After setting the time, press the **right-facing** button again and set the correct day (Monday to Sunday) using the **UP/DOWN** buttons.

When finished, press and hold the **TIME** button (for approximately 8 seconds) until the time stops flashing. Then, press the **TIME** button briefly once more, and the correct time will start. The flashing colon indicates that the clock is running.

2. Operating Modes:

You can select from **3 operating modes** by pressing the **MODE** button.

Man: The roller shutters can only be operated manually; the set time programs are inactive.

Auto: Automatic mode, in which the programmed channels operate automatically.


Random: A small shield behind the AUTO text indicates the random movement mode. Automatic

Office:

Frangepán utca 79. H-1139 Budapest
www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

Invoicing address:

SANET-Trade Kft. | Petneházy utca 28. H-1139 Budapest
EU VAT ID: 14996429-2-4 | Bank account number: 10401000-50515755-88901018 K&H

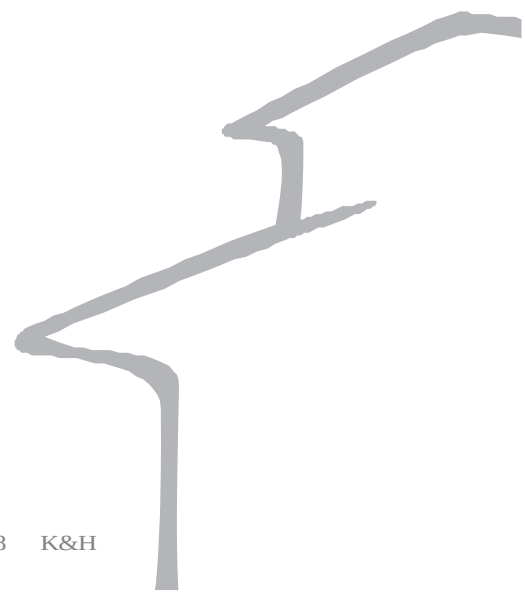

movement that occurs at a time shifted compared to the pre-set time command. (HOLIDAY function).

3. Channel time programming:

It is possible to set individual, different time commands for all 5 channels for every day.

Select the **AUTO** mode by pressing the **MODE** button.

Enter channel 1 using the right and left step / channel selector buttons!

We start setting the time commands with the day we specified when setting the precise time.

Press and hold the **TIME** button (for approx. 5 seconds), at which point the morning winding time will appear. Press the **TIME** button again briefly, and the hour part of the winding time will start flashing. Set the hour using the **DOWN/UP** buttons, then briefly press the **right-arrow** button and set the minute as well. When the precise opening time is set, briefly press the **TIME** button, and it will immediately switch to the winding time for the next day.

Repeat the above steps for every day of the week.

It is possible to set unique, different times for each day.

Once you have finished recording the winding times, briefly press the **MODE** button so that you can also set the lowering time commands.

Set the hour using the **DOWN/UP** buttons, then briefly press the **right-arrow** button and set the minute as well.

When the precise closing time is set, briefly press the **TIME** button, and it will immediately switch to the lowering time for the next day.


Repeat the above steps for every day of the week.

Office:

Frangepán utca 79. H-1139 Budapest
www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

Invoicing address:

SANET-Trade Kft. | Petneházy utca 28. H-1139 Budapest
EU VAT ID: 14996429-2-4 | Bank account number: 10401000-50515755-88901018 K&H

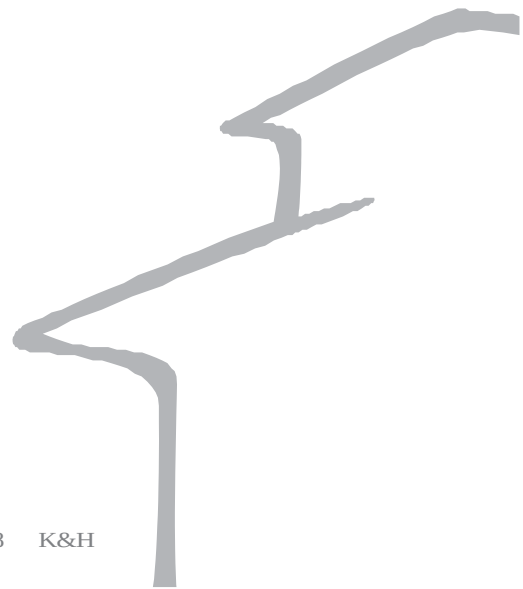

It is possible to set unique, different times for each day.

When the precise closing time is set, press and

hold the **TIME** button (for approx. 8 seconds) until the flashing of the time displayed on the screen stops!

This saves all the programs.

3. Proper functioning:

The opening and closing times **cannot be set within one hour of each other!**

For all set channels to operate automatically on the remote control, all channel numbers must be selected/highlighted. Otherwise, only the commands of the selected channel will be executed.

4. Battery replacement

The device operates with a CR2450 type battery.

The warranty covering the remote controls is: 2 years!

Office:

Frangepán utca 79. H-1139 Budapest

www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

Invoicing address:

SANET-Trade Kft. | Petneházy utca 28. H-1139 Budapest

EU VAT ID: 14996429-2-4 | Bank account number: 10401000-50515755-88901018 K&H

