

## SMART Home BIDI SOLAR MOTOR PROGRAMING

**Pairing with BIDI remote only (10-second rule):** Press and hold the button on the motor head (the motor will give feedback), then press and hold the STOP button until the motor gives feedback again. This completes the pairing with the BIDI remote control.

**Changing the rotation direction (if necessary):** Press and hold the DOWN + UP buttons simultaneously until the motor gives feedback (approx. 2 seconds).

**Setting the upper limit:** The motor is already in limit-setting mode (it only moves step-by-step when pressing the buttons). Press and hold the UP button — the motor will start moving upwards automatically. Stop the motor about 10 cm before the desired upper limit. Then, move it in small steps (still in step mode) until the exact desired upper limit is reached (do not push it hard against the end stops). Save the position by pressing and holding the UP + STOP buttons simultaneously (after about 3 seconds the motor will confirm with feedback).

**Setting the lower limit:** Then, press and hold the DOWN button — the motor will move down automatically. Stop it about 10 cm before the desired lower limit. Move it in small steps until the exact desired lower position is reached (do not press hard against the anti-push-up mechanism). Save the position by pressing and holding the DOWN + STOP buttons simultaneously (after about 3 seconds the motor will confirm with feedback).  
This completes the full limit setting!

**Deleting a remote:** Press P2, P2 on the original remote, then press P2 on the new remote (must be done within 6 seconds).

**Távírányító törlése:** Press P2, STOP, then P2 again — only the current channel is deleted; all motor settings and limits remain intact.

### **Motor head button functions (UP-DOWN movement):**

1. UP-DOWN movement: Enter programming.
3. UP-DOWN movement: Change rotation direction.
4. UP-DOWN movement: Restore to factory settings (complete reset).