

DC 169 description

1. Add the time


On the backside push the **MODE** button, till the emitter will be in man mode.



Push the **TIME** button for 5 second till the time will start flashing on the LCD.

Now on the front side set up the hour with the **UP** and **DOWN** buttons, then push the **TIME** button for once.

Now set up the minute, when You ready push the **TIME** button for 8 seconds, till the time stop flashing. Than push the **TIME** button one more to start the clock.

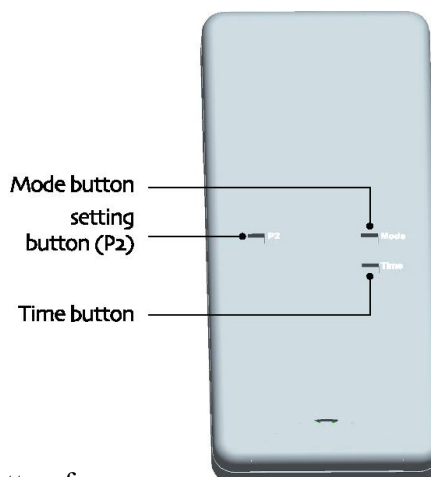


2. Working modes

You can choose 3 different type of mode with pushing the **MODE** button:

MAN: You can use the roller shutters only with manual (no timing).

AUTO: timing is working.

RANDOM: the roller shutters work randomly (holiday program).

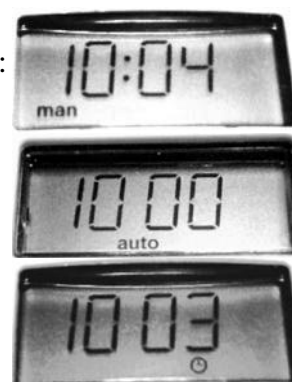

iroda:

H-1139 Budapest, Frangepán utca 79.

www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

számlázási cím:

SANET-Trade Kft. | H-1139 Budapest, Petneházy utca 28.

Adószám: 14996429-2-41 | Bankszámlaszám: 10401000-50515755-88901018 K&H

3. Set the timing

It is possible to give different timing for all the 15 channels.
Set the **AUTO** mode (by pushing the **MODE** button).
Choose the channel (with the **LEFT** or **RIGHT** button).



Then push the **TIME** button for 5 seconds, till the morning opening time starts flashing.
Set the hour with the **UP** and **DOWN** buttons then push the **TIME** button once.
Now set the minute with the **UP** and **DOWN** buttons, when You finished push the **MODE** button.

Now You can set the evening close time. Set the hour with the **UP** and **DOWN** buttons then push the **TIME** button once. Now set the minute with the **UP** and **DOWN** buttons, when You finished push the **TIME** button for 8 seconds. Now You finished the programming.

4. Correct use

You have to make at least 1 hour between the opening and closing time.
To use the timing on all the programmed channels, choose the 00 channel on the emitter,
and leave it on it. Otherwise, only that channel will move for the timing which is on the LCD.

5. Battery change

The emitter works with **CR2430** battery.

The guarantee for all the SMART HOME emitters is 2 years.

iroda:

H-1139 Budapest, Frangepán utca 79.

www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

számlázási cím:

SANET-Trade Kft. | H-1139 Budapest, Petneházy utca 28.

Adószám: 14996429-2-41 | Bankszámlaszám: 10401000-50515755-88901018 K&H

