



1 Programing the emitter

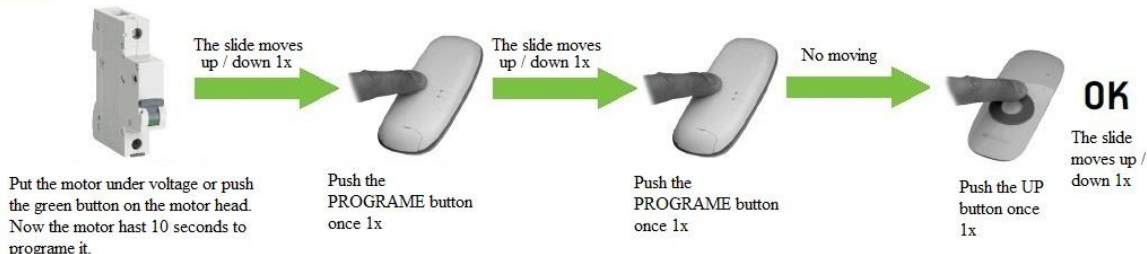


2 Change direction

Push the green button on the motor head and hold it for 6 seconds till the slide moves up / down 1x. Now we changed direction!


3 Copy the emitter (Don't need power cut off, this is the only way to learn more emitter to a motor)

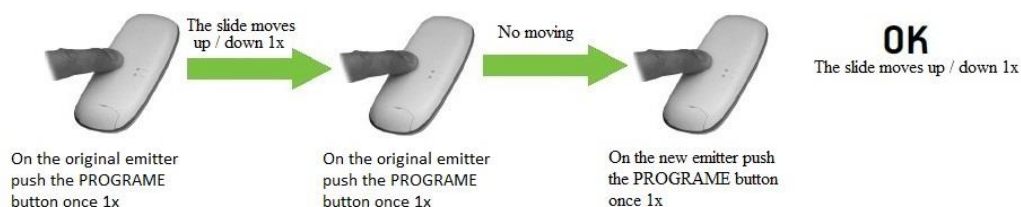

4 Erase the emitter (Don't need power cut off)

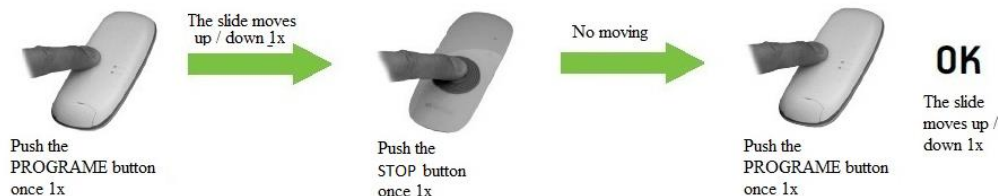

5 Step mode function on / off (Don't need power cut off)

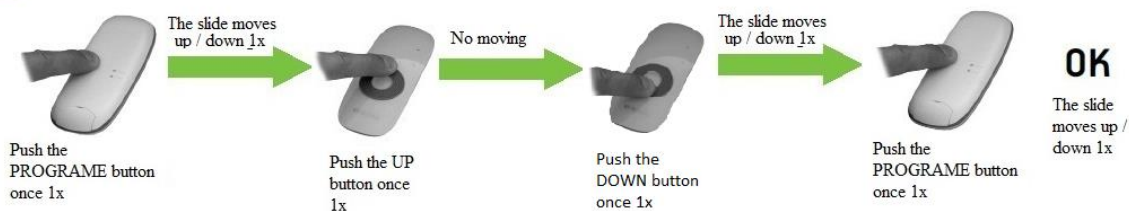

iroda:

H-1139 Budapest, Frangepán utca 79.

www.smart-home.hu | info@smart-home.hu | +36 20 287 1714

számlázási cím:

SANET-Trade Kft. | H-1139 Budapest, Petneházy utca 28.

Adószám: 14996429-2-41 | Bankszámlaszám: 10401000-50515755-88901018 K&H