

R50 Mechanical BIDI motor programming

Programming using BIDI remote only (10 sec rule): Press and hold the button on the motor head (the motor will give feedback), then hold down the STOP button until the motor responds. This is how we coordinate it with the BIDI remote control.

Change of direction of rotation (if necessary): Press and hold the DOWN + UP buttons simultaneously until the motor responds (about 2 sec)!

Remote control copy: P2, P2 button on the original remote and P2 on the new remote (should be done within 6 seconds)

Delete a remote control: Press the P2 button, then STOP, then P2 (Only the selected channel is deleted, all end positions and settings remain stored in the motor)

Activation/deactivation of the sun function: P2, P2, UP. After deactivating or activating the function, the previous setting can be maintained for 30 minutes.

Activation: P2, P2, UP = Two DOWN-UP movements and 3 beeps

Deactivation: P2, P2, UP = One DOWN-UP movement and long beep