

DD6102H User Manual

1. Switching the current channel:

Press the CH button. Select the channel using the scroll bar, then press the STOP button once. The channel has been successfully set.

2. Setting the number of channels:

Note: The system exits setup mode without saving after 10 seconds of inactivity.

Press the Menu button once (the "4 squares, 1 circle" symbol in the bottom right corner), then use the scroll bar to select the CH option and press the STOP button. "MAX and 15" will appear on the display. Use the scroll bar to select the desired channel number (1–15), then press the STOP button. Pressing the UP button allows you to return to the menu and then to the home screen.

3. Enable/disable sunlight detection:

Note: The system exits setup mode without saving after 10 seconds of inactivity. This function is only available with motor what is paired a the sun-wind sensor

Press the Menu button once (the "4 squares, 1 circle" symbol in the bottom right corner), then use the scroll bar to select the SUN option (SUN ON, SUN OFF) and press the STOP button. Use the scroll bar to enable or disable the sunlight sensor (indicated by the SUN symbol or the crossed-out SUN symbol). After the icon flashes twice, "OK" appears, indicating the setting was successful. Press the UP button to return to the menu and then to the home screen.

4. Lock/unlock key combinations:

Note: The system exits setup mode without saving after 10 seconds of inactivity. If locked, the button combinations do not function and do not send commands.

Press the Menu button once (the "4 squares, 1 circle" symbol in the bottom right corner), then use the scroll bar to select the "LOCK" or "UNLOCK" option and press the STOP button. Use the scroll bar to enable or disable the combined button function.

"LOCK" indicates that the buttons are locked.

"UNLOCK" indicates that the buttons are unlocked.

You can return to the menu, and then to the home screen, by pressing the UP button.

5. Enable/disable automatic start percentage (angle):

Note: The system exits setup mode without saving after 10 seconds of inactivity. This operation does not apply in one-way mode.

Press the Menu button once (the "4 squares, 1 circle" symbol in the bottom right corner), then use the scroll bar to select "AUTO" or "MANUAL" and press the STOP button. Use the scroll bar to select the AUTO or MANUAL option.

"AUTO" — automatic start percentage enabled;
"MANUAL" — automatic start percentage disabled.

Pressing the UP button allows you to return to the menu and then to the home screen.

6. Switching between one-way and two-way modes:

Note: The mode used before shutdown is retained by default after restarting.

Press the Menu button once (the "4 squares, 1 circle" symbol in the bottom right corner), then use the scroll bar to select the "BI" or "UNI" option and press the STOP button.
Use the scroll bar to select either BI mode or UNI mode.

"BI" — bidirectional mode;
"UNI" — unidirectional mode

Pressing the UP button allows you to step back into the menu and then to the home screen.

7. Switching between step (jog) mode and continuous operation mode:

Press the symbol featuring a circle with an arrow in the bottom-left corner and select JOG mode (three slanted lines) or continuous mode (two WIFI symbols pointing up and down). If you wish to switch press the circular arrow symbol again.

8. Setting the motor percentage/angle:

Note: If the automatic start percentage (angle) is enabled, the system automatically sends the command 3 seconds after the set value is reached.

By rapidly scrolling the wheel, the percentage can be set directly to 0%, 25%, 50%, 75%, or 100%, and the angle to 0°, 45°, 90°, 135°, or 180°.

Press the percentage button in the top right corner once. This brings up the slat tilt angle adjustment. Pressing it again and it will switch to the shutter percentage adjustment. You can lock in the desired mode using the STOP button. Once set, you can access this function by using the scroll bar.

9. Editing the channel name:

Select the channel you wish to name. Press the EDIT button (located next to the P2 button) on the back of the remote control once; the first character on the display will start flashing. Use the scroll bar to select the desired letter or number. Use the UP and DOWN buttons to select the next or previous character. The name can be up to 16 characters long. Press the STOP button to finalize the name.