

Trendline RE10-RE13-RE30 motors programming

For programming, use only remotes without a time program. Once programming is complete, the settings can be copied to remotes with a time program and operated with them.

Connection: The black and white wires are for an option to connect a bell switch.

Coordination: Apply power (or press the white button on the motor head until the motor signals), then within 10 seconds press the STOP button on the chosen channel and hold it until the motor confirms coordination with a sound and movement (about 2 seconds).

Rotation direction change: Required if the motor is installed on the left side when viewed from the outside. Press and hold the DOWN + UP buttons simultaneously until the motor signals back (about 2 seconds). The rotation direction is now reversed.

Upper limit setting: The motor is already in the automatic limit programming mode (it only moves in steps when the button is pressed). Press and hold the UP button until the motor starts moving upwards automatically. Stop the motor about 10 cm before the limit position. Then, using small steps (step mode), reach the desired upper limit (do not tighten the stops). Save the position by pressing and holding the UP + STOP buttons simultaneously (After 2 seconds, the motor will indicate that the setting has been saved with a sound and movement)

Lower limit setting: Press and hold the DOWN button until the motor starts moving downwards automatically. Stop the motor about 10 cm before the end position. Then, using small steps (step mode), reach the desired lower limit (do not tighten the anti-lift device). Save the position by pressing and holding the DOWN + STOP buttons simultaneously (After 2 seconds, the motor will indicate that the setting has been saved with a sound and movement)

The limit position setting is now complete.

Setting the intermediate position: After the end positions have been set, move the shutter to the desired position. Then press the following button sequence: P2, STOP, STOP.

The motor will signal confirmation. From now on, this favorite position can be recalled by pressing and holding the STOP button for 2 seconds.

End position correction: Depending on which end position you want to correct, press and hold the corresponding direction button (UP or DOWN) + STOP for 5 seconds until the motor signals confirmation.

This deletes only that end position. You can then set the new position according to the procedure described above.

Remote control copy: P2, P2 on the original remote then P2 on the new remote.

The procedure must be completed within 6 seconds.

Delete remote control: Press the following buttons in sequence: P2, STOP, P2.

Only the selected channel will be deleted; the end positions and all motor settings remain stored in the motor.

Set the rewind function: Press the following buttons in sequence: P2, DOWN, DOWN.

The motor will signal when the setting is complete.

Set sensitivity: Press the following buttons in sequence: P2, STOP, DOWN.

The motor will move twice, then three times in the same way, indicating that the setting is complete